

TAB	PAGE	LINE	MENU ORDER	TAB	PAGE	LINE	ALPHABETICAL ORDER
1	1	1	File Format	5	4	3	4K Output Select
1	1	2	JPEG Quality	6	1	1	Add Item
1	1	3	JPEG Image Size	1	9	1	AEL w/shutter (Auto/On/Off)
1	1	4	Aspect Ratio	1	7	2	AF Area Auto Clear
1	1	5	Panorama: Size	1	6	6	AF Area Registration
1	1	6	Panorama: Direction	2	2	1	AF drive speed
1	2	1	Long Exposure NR	1	6	1	AF Illuminator
1	2	2	High ISO NR	1	13	4	AF in Focus Mag.
1	2	3	Color Space	1	7	5	AF Micro Adj.
1	2	4	Lens Comp.	2	2	2	AF Tracking Sens.
1	3	1	Auto Mode	1	6	3	AF w/ Shutter
1	3	2	Scene Selection	3	1	5	Airplane Mode
1	3	3	Super Auto Img Extract	5	5	4	Area Setting
1	3	4	Drive Mode	1	1	4	Aspect Ratio
1	3	5	Bracket Settings	2	3	1	Audio Level Display
1	3	6	Interval Shoot Func.	2	2	6	Audio Rec Level
1	4	1	MR Recall	2	2	5	Audio Recording
1	4	2	MR (1/2) Memory	2	9	5	Audio Signals
1	4	3	Reg. Cust. Shoot Set	1	3	1	Auto Mode
1	5	1	Focus Mode	1	14	4	Auto Object Framing
1	5	2	Priority Set in AF-S	5	2	5	Auto Power OFF Temp
1	5	3	Priority Set In AF-C	2	7	2	Auto Review
1	5	4	Focus Area	2	2	3	Auto Slow Shutter
1	5	5	Focus Area Limit	2	9	1	AV/TV Rotate
1	5	6	Switch V/H AF Area	3	2	1	Bluetooth Settings
1	6	1	AF Illuminator	1	3	5	Bracket Settings
1	6	2	Face/Eye AF Set.	1	7	4	Circ. Of Focus Point
1	6	3	AF w/ Shutter	5	3	1	Cleaning mode
1	6	4	Pre-AF	1	2	3	Color Space
1	6	5	Eye-Start AF	4	2	5	Cont. PB for Interval
1	6	6	AF Area Registration	5	5	5	Copyright Info
1	7	1	Del. Regist. AF Area	1	11	4	Creative Style
1	7	2	AF Area Auto Clear	3	1	4	Ctrl w/Smartphone
1	7	3	Disp.cont.AF Area	2	8	2	Custom Key (Movies)
1	7	4	Circ. Of Focus Point	2	8	3	Custom Key (Playback)
1	7	5	AF Micro Adj.	2	8	1	Custom Key (stills)
1	8	1	Exposure Comp.	5	5	3	Date/Time Setup
1	8	2	ISO Setting	1	7	1	Del. Regist. AF Area
1	8	3	Metering Mode	4	1	3	Delete
1	8	4	Face Priority In Multi Metering	6	1	5	Delete All
1	8	5	Spot Metering Point	5	2	2	Delete Confirm
1	8	6	Exposure Step (.5EV,.3EV)	6	1	3	Delete Item

TAB	PAGE	LINE	MENU ORDER	TAB	PAGE	LINE	ALPHABETICAL ORDER
1	9	1	AEL w/shutter (Auto/On/Off)	6	1	4	Delete Page
1	9	2	Exposure Std. Adjust	5	3	5	Demo Mode
1	10	1	Flash Mode	2	8	5	Dial Settings
1	10	2	Flash Comp.	2	9	1	Dial/Wheel EV Comp
1	10	3	Exp.Comp.Set	2	9	4	Dial/Wheel Lock
1	10	4	Wireless Flash	2	8	6	Dial/Wheel Setup
1	10	5	Red Eye Reduction	2	6	1	DISP Button
1	11	1	White Balance	1	7	3	Disp.cont.AF Area
1	11	2	Priority Set in AWB	4	3	4	Display As Group
1	11	3	DRO/Auto HDR	5	7	1	Display Media Info
1	11	4	Creative Style	5	2	3	Display Quality
1	11	5	Picture Effect	4	3	5	Display Rotation
1	11	6	Picture Profile	1	3	4	Drive Mode
1	12	1	Soft Skin Effect	1	11	3	DRO/Auto HDR
1	12	2	Shutter AWB Lock	2	4	2	e-Front Curtain Shutter
1	13	1	Focus Magnifier	3	2	3	Edit Device Name
1	13	2	Focus Magnif. Time	4	2	2	Enlarge Image
1	13	3	Initial Focus Mag.	4	2	3	Enlarge Initial Mag
1	13	4	AF in Focus Mag.	4	2	4	Enlarge Initial Position
1	13	5	MF Assist	1	10	3	Exp.Comp.Set
1	13	6	Peaking Setting	1	8	1	Exposure Comp.
1	14	1	Face Registration	2	1	1	Exposure Mode
1	14	2	Register Faces Priority	2	6	6	Exposure Set. Guide
1	14	3	Smile Shutter	1	9	2	Exposure Std. Adjust
1	14	4	Auto Object Framing	1	8	6	Exposure Step (.5EV,.3EV)
1	14	5	Self-Portrait/ - timer	1	6	5	Eye-Start AF
2	1	1	Exposure Mode	1	8	4	Face Priority In Multi Metering
2	1	2	S&Q Exposure Mode	1	14	1	Face Registration
2	1	3	File Format	1	6	2	Face/Eye AF Set.
2	1	4	Record Setting	1	1	1	File Format
2	1	5	S&Q Settings	2	1	3	File Format
2	1	6	Proxy Recording	5	6	1	File Number
2	2	1	AF drive speed	5	1	3	Finder Color Temp.
2	2	2	AF Tracking Sens.	2	6	3	Finder Frame Rate
2	2	3	Auto Slow Shutter	2	6	2	FINDER/MONITOR
2	2	4	Initial Focus Mag	1	10	2	Flash Comp.
2	2	5	Audio Recording	1	10	1	Flash Mode
2	2	6	Audio Rec Level	1	5	4	Focus Area
2	3	1	Audio Level Display	1	5	5	Focus Area Limit
2	3	2	Wind Noise Reduct.	1	13	2	Focus Magnif. Time
2	3	3	Marker Display	1	13	1	Focus Magnifier
2	3	4	Marker Settings	1	5	1	Focus Mode

TAB	PAGE	LINE	MENU ORDER	TAB	PAGE	LINE	ALPHABETICAL ORDER
2	3	5	Movie w/Shutter	5	6	5	Folder Name
2	4	1	Silent Shooting	5	5	6	Format
2	4	2	e-Front Curtain Shutter	2	9	2	Func. Of Touch Oper
2	4	3	Release w/o Lens	2	8	4	Function Menu Set
2	4	4	Release w/o Card	5	1	4	Gamma Disp. Assist
2	4	5	Steadyshot	2	6	5	Grid Line
2	5	1	Zoom	5	4	2	HDMI Settings
2	5	2	Zoom Setting	1	2	2	High ISO NR
2	5	3	Zoom Ring Rotate	4	3	3	Image Index
2	6	1	DISP Button	4	3	6	Image Jump Setting
2	6	2	FINDER/MONITOR	2	2	4	Initial Focus Mag
2	6	3	Finder Frame Rate	1	13	3	Initial Focus Mag.
2	6	4	Zebra Setting	1	3	6	Interval Shoot Func.
2	6	5	Grid Line	1	8	2	ISO Setting
2	6	6	Exposure Set. Guide	1	1	3	JPEG Image Size
2	7	1	Live View Display	1	1	2	JPEG Quality
2	7	2	Auto Review	5	5	2	Language
2	8	1	Custom Key (stills)	1	2	4	Lens Comp.
2	8	2	Custom Key (Movies)	2	7	1	Live View Display
2	8	3	Custom Key (Playback)	3	2	2	Location Info Link Set
2	8	4	Function Menu Set	1	2	1	Long Exposure NR
2	8	5	Dial Settings	2	3	3	Marker Display
2	8	6	Dial/Wheel Setup	2	3	4	Marker Settings
2	9	1	AV/TV Rotate	1	8	3	Metering Mode
2	9	1	Dial/Wheel EV Comp	1	13	5	MF Assist
2	9	2	Func. Of Touch Oper	5	2	1	Mode Dial Guide
2	9	3	Movie Button	5	1	1	Monitor Brightness
2	9	4	Dial/Wheel Lock	2	9	3	Movie Button
2	9	5	Audio Signals	2	3	5	Movie w/Shutter
3	1	1	Send to Smartphone Fun	1	4	2	MR (1/2) Memory
3	1	2	Send To Computer	1	4	1	MR Recall
3	1	3	View On TV	5	6	4	New Folder
3	1	4	Ctrl w/Smartphone	5	2	6	NTSC/PAL Selector
3	1	5	Airplane Mode	1	1	6	Panorama: Direction
3	1	6	Wi-Fi Settings	1	1	5	Panorama: Size
3	2	1	Bluetooth Settings	4	2	6	PB Speed for Interval
3	2	2	Location Info Link Set	5	5	1	PC Remote Settings
3	2	3	Edit Device Name	1	13	6	Peaking Setting
3	2	4	Reset Network Set.	4	2	1	Photo Capture
4	1	1	Protect	1	11	5	Picture Effect
4	1	2	Rotate	1	11	6	Picture Profile
4	1	3	Delete	5	2	4	Power Save Start Time

TAB	PAGE	LINE	MENU ORDER	TAB	PAGE	LINE	ALPHABETICAL ORDER
4	1	4	Rating	1	6	4	Pre-AF
4	1	5	Rating Set (Custom Key)	1	5	3	Priority Set In AF-C
4	1	6	Specify Printing	1	5	2	Priority Set in AF-S
4	2	1	Photo Capture	1	11	2	Priority Set in AWB
4	2	2	Enlarge Image	4	1	1	Protect
4	2	3	Enlarge Initial Mag	2	1	6	Proxy Recording
4	2	4	Enlarge Initial Position	4	1	4	Rating
4	2	5	Cont. PB for Interval	4	1	5	Rating Set (Custom Key)
4	2	6	PB Speed for Interval	2	1	4	Record Setting
4	3	1	Slide Show	5	6	6	Recover Image DB
4	3	2	View Mode	1	10	5	Red Eye Reduction
4	3	3	Image Index	1	4	3	Reg. Cust. Shoot Set
4	3	4	Display As Group	1	14	2	Register Faces Priority
4	3	5	Display Rotation	2	4	4	Release w/o Card
4	3	6	Image Jump Setting	2	4	3	Release w/o Lens
5	1	1	Monitor Brightness	5	4	1	Remote Ctrl
5	1	2	Viewfinder Bright.	3	2	4	Reset Network Set.
5	1	3	Finder Color Temp.	4	1	2	Rotate
5	1	4	Gamma Disp. Assist	2	1	2	S&Q Exposure Mode
5	1	5	Volume Settings	2	1	5	S&Q Settings
5	1	6	Tile Menu	1	3	2	Scene Selection
5	2	1	Mode Dial Guide	5	6	3	Select REC Folder
5	2	2	Delete Confirm	1	14	5	Self-Portrait/ - timer
5	2	3	Display Quality	3	1	2	Send To Computer
5	2	4	Power Save Start Time	3	1	1	Send to Smartphone Fun
5	2	5	Auto Power OFF Temp	5	6	2	Set File Name
5	2	6	NTSC/PAL Selector	5	7	3	Setting Reset
5	3	1	Cleaning mode	1	12	2	Shutter AWB Lock
5	3	2	Touch Operation	2	4	1	Silent Shooting
5	3	3	Touch Panel/Pad	4	3	1	Slide Show
5	3	4	Touch Pad Settings	1	14	3	Smile Shutter
5	3	5	Demo Mode	1	12	1	Soft Skin Effect
5	3	6	TC/UB Settings	6	1	2	Sort Item
5	4	1	Remote Ctrl	4	1	6	Specify Printing
5	4	2	HDMI Settings	1	8	5	Spot Metering Point
5	4	3	4K Output Select	2	4	5	Steadyshot
5	4	4	USB Connection	1	3	3	Super Auto Img Extract
5	4	5	USB LUN Setting	1	5	6	Switch V/H AF Area
5	4	6	USB Power Supply	5	3	6	TC/UB Settings
5	5	1	PC Remote Settings	5	1	6	Tile Menu
5	5	2	Language	5	3	2	Touch Operation
5	5	3	Date/Time Setup	5	3	4	Touch Pad Settings

TAB	PAGE	LINE	MENU ORDER	TAB	PAGE	LINE	ALPHABETICAL ORDER
5	5	4	Area Setting	5	3	3	Touch Panel/Pad
5	5	5	Copyright Info	5	4	4	USB Connection
5	5	6	Format	5	4	5	USB LUN Setting
5	6	1	File Number	5	4	6	USB Power Supply
5	6	2	Set File Name	5	7	2	Version
5	6	3	Select REC Folder	4	3	2	View Mode
5	6	4	New Folder	3	1	3	View On TV
5	6	5	Folder Name	5	1	2	Viewfinder Bright.
5	6	6	Recover Image DB	5	1	5	Volume Settings
5	7	1	Display Media Info	1	11	1	White Balance
5	7	2	Version	3	1	6	Wi-Fi Settings
5	7	3	Setting Reset	2	3	2	Wind Noise Reduct.
6	1	1	Add Item	1	10	4	Wireless Flash
6	1	2	Sort Item	2	6	4	Zebra Setting
6	1	3	Delete Item	2	5	1	Zoom
6	1	4	Delete Page	2	5	3	Zoom Ring Rotate
6	1	5	Delete All	2	5	2	Zoom Setting